



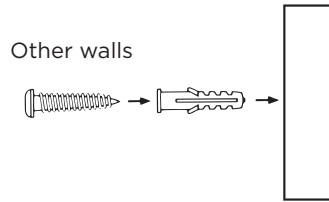


WRAP ROD Installation Instructions


You will need the following tools:
Pencil - Drill - Screwdriver - Measuring Tape - Level - Step Ladder

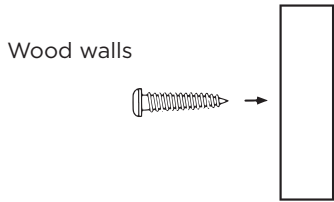


1. Remove All Hardware from the Box.

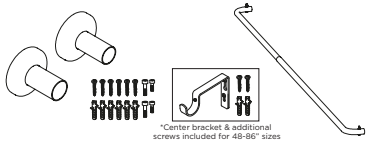


6. Slide each curtain on each half of the extendable pole. Slide the smaller pole inside the larger one.

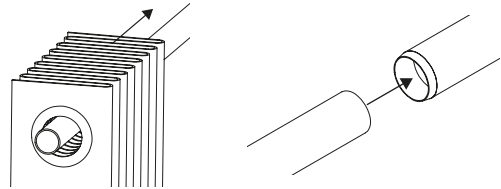


2. Loosen the screws on the end of both pole sections to release the end plates. Use the larger hex key to loosen the top screw, and the smaller hex key too loosen the bottom screw.

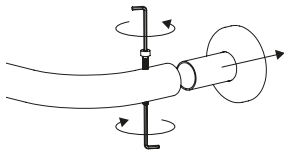


7. Place the larger and smaller cover plates onto their respective end plates.

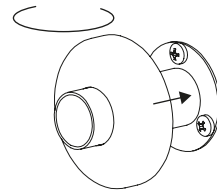


3. Identify the larger and smaller end plates. Note on which side of the window each one will be mounted as they will have to match their respective pole ends.

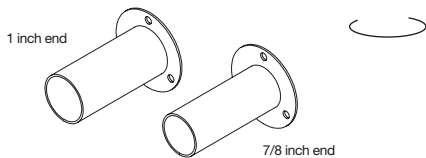


8. Place the pole in position onto the end plates making sure that the larger and smaller ends of the poles are facing their respective end plates. If using a center bracket, ensure that the cup is supporting the pole (adjust the bracket if necessary).

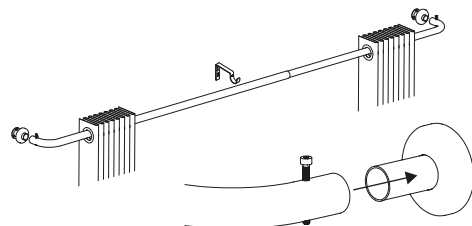



4. Position each end plate and use it as a guide to mark the screw positions. If using a center bracket, mark the top screw position 3/8" over the horizontal line and the bottom screw 3/4" under the line.

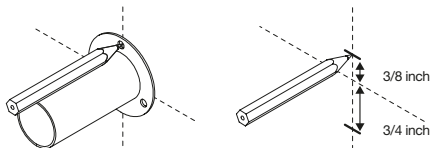

5. Drill the holes and secure the end plates with the appropriate fixings.

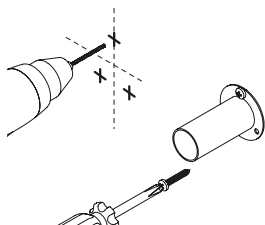

9. Secure the pole on the end plates by tightening the short grub screw underneath the pole. If using the center bracket, tighten the grub screw at the back of the cup.

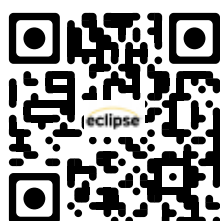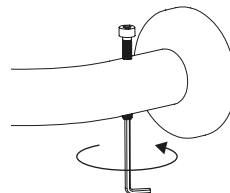

For helpful videos & more information visit eclipsecurtains.com

or scan this QR code with your smartphone