




WRAP PIPE ROD


Installation Instructions

You will need the following tools:
Pencil - Drill - Screwdriver - Measuring Tape - Level - Step Ladder


1. Remove All Hardware from the Box

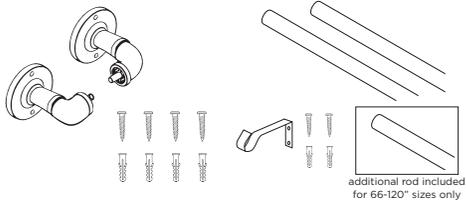


4. Slide Curtain onto Rod

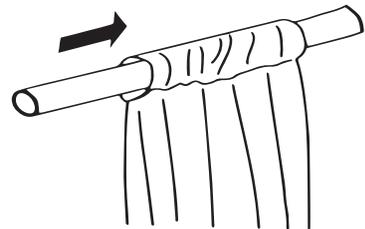


2. Unscrew Rods from Brackets

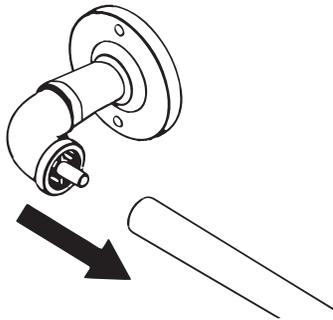


5. Attach Rod by Turning Clockwise into Bracket

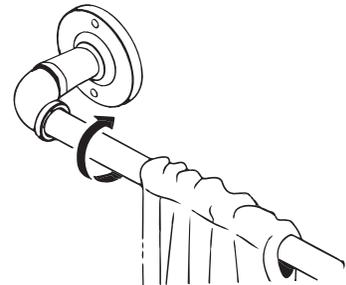


3a. Install Screws for Wall Mount

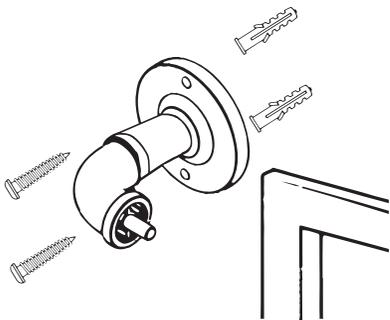

6. Install Center Bracket

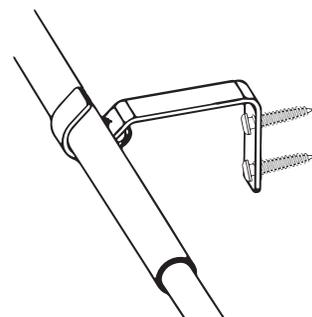

3b. Install Screws for Ceiling Mount

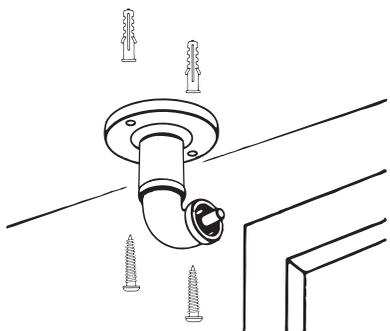

For helpful videos & more information visit
eclipsecurtains.com

or scan the QR code below
with your smartphone

