





WRAP ROD

Installation Instructions


You will need the following tools:
Pencil - Drill - Screwdriver - Measuring Tape - Level - Step Ladder

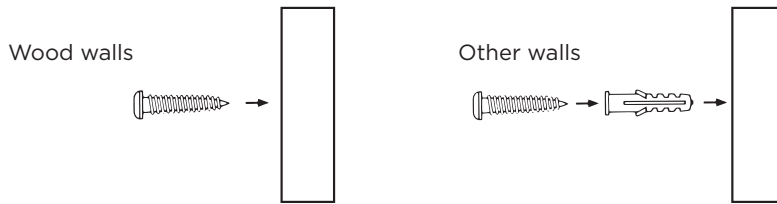


1. Remove All Hardware from the Box

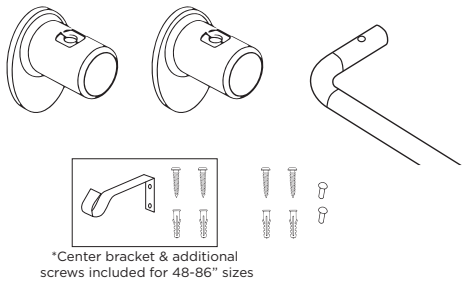


4. Slide Curtain onto Rod

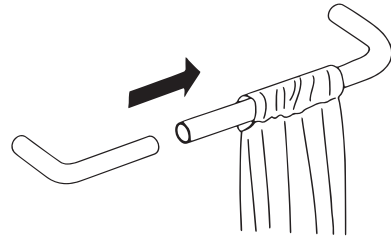



2. Install Screw

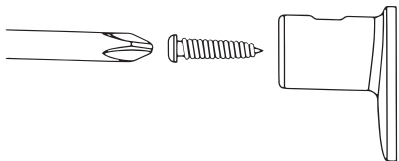

5. Attach Rod to Brackets Install Center Support Bracket When Needed.

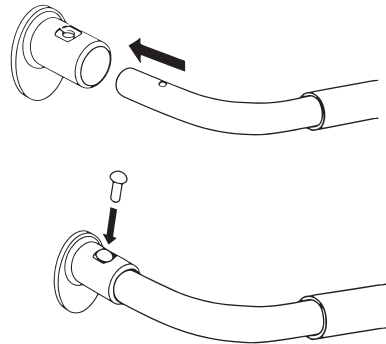

3. Attach Bracket to Wall

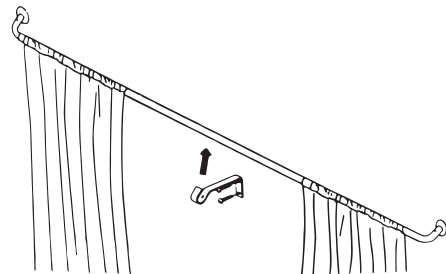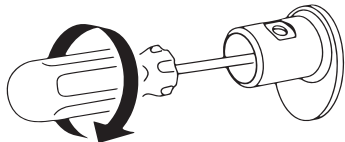

For helpful videos & more information visit
eclipsecurtains.com

or scan the QR code below
with your smartphone

