



# TENSION ROD

## Easy, No Tools Installation


1. Simply slide the adjustable rod to fit inside your window casing.



2. Twist the rod to lock in place.



To use extender rod, twist endcap off of the larger rod. Slide extender into larger end & reattached endcap.

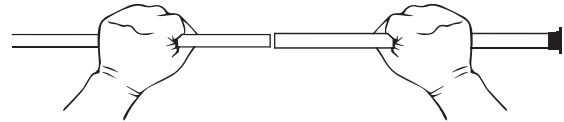

For helpful videos & more information visit  
[eclipsecurtains.com](http://eclipsecurtains.com)

or scan the QR code here  
with your smartphone